


FN+F1= CD
FN+F2= 音量减
FN+F3= 音量加
FN+F4= 静音
FN+F5= 上一曲
FN+F6= 暂停/播放
FN+F7= 下一曲
FN+F8= 停止
FN+F9= E-mail
FN+F10= 浏览器
FN+F11= 我的电脑
FN+F12= 计算器

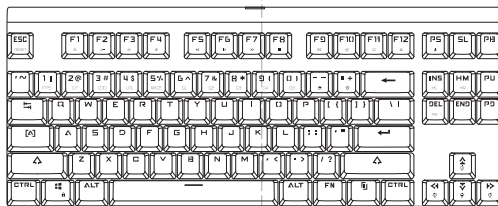

系统要求:

WIN2000/XP/VISTA/WIN7/WIN8/WIN10

中文
按键寿命: 5000万次
工作电压: +5V±5%
使用最大电流: 500mA
重量: 619g±20g
尺寸: 347x139x40mm

Español
Vida clave: 50 millones de veces
Voltaje de trabajo: + 5V ± 5%
Corriente máxima utilizada: 500 mA
Peso: 619 g ± 20 g
Tamaño: 347x139x40mm

Türk dili
Anahtar yaşam: 50 milyon kez
Çalışma gerilimi: + 5V ± 5%
Kullanılan maksimum akım: 500mA
Ağırlık: 619g ± 20g
Ebat: 347x139x40mm

Ελληνικά
Κύρια ζωή: 50 εκατομμύρια φορές
Τάση λειτουργίας: + 5V ± 5%
Μέγιστο ρεύμα που χρησιμοποιείται: 500mA
Βάρος: 619g ± 20g
Μέγεθος: 347x139x40mm

Deutsch
Schlüssel Lebensdauer: 50 Millionen Mal
Arbeitsspannung: + 5V ± 5%
Maximaler verwendeter Strom: 500mA
Gewicht: 619 g ± 20 g
Größe: 347x139x40mm

System Requirements:

WIN2000/XP/VISTA/WIN7/WIN8/WIN10

English
Key life: 50 million times
Working voltage: +5V±5%
Maximum current used: 500mA
Weight: 619g ± 20g
Size: 347x139x40mm

Português
Vida chave: 50 milhões de vezes
Tensão de trabalho: + 5V ± 5%
Corrente máxima usada: 500mA
Peso: 619g ± 20g
Tamanho: 347x139x40mm

Polski
Kluczowe życie: 50 milionów razy
Napięcie robocze: + 5 V ± 5%
Maksymalny zastosowany prąd: 500mA
Waga: 619 g ± 20 g
Rozmiar: 347 x 139 x 40 mm

FN+F1= CD
FN+F2= Volume reduce
FN+F3= Volume increase
FN+F4= Mute
FN+F5= Prev Track
FN+F6= Pause/Play
FN+F7= Next Track
FN+F8= Stop
FN+F9= E-mail
FN+F10= Internet
FN+F11= My computer
FN+F12= Calculator

Українська
Основне життя: 50 мільйонів разів
Робоча напруга: + 5В ± 5%
Максимальний використаний струм: 500mA
Вага: 619г ± 20г
Розмір: 347x139x40mm

System Parameters
系统参数

功能说明:

- 支持常用游戏模式按键背光及自定义录制按键背光功能。
- 支持14种酷炫LED灯光特效。按FN+INS切换灯光顺序
繁星点点, 随按随灭, 混光模式, 游戏高手, 川流不息, 随按随亮, 正弦光波, 常亮模式, 呼吸模式, 七彩霓虹, 一触即发, 雨滴滑落, 彩虹轮盘, 涟漪扩散。
- 支持FN+ “/” = 五级速度调节, 支持FN+ “←/→” 个别模式下方向调节, 支持FN+ “↑/↓” 五级亮度调节。
- 支持全键无冲。
- 支持锁WIN功能, 同时锁住WIN和APP键。
- 支持FN+ESC复位功能, 恢复到“繁星点点”默认灯光设置。
- 支持FN+PS关/开背光功能。

游戏高手模式及按键自定义设置:

FN+ 1 A,S,D,W,↑,↓,←,→,ESC 亮
FN+ 2 A,S,D,W,左Ctrl, 左Shift, 左Alt, Space, R, G, Q, E, B, 1-5, Tab, F1-F3, HM, END, PU, PD, PS 亮
FN+ 3 Q, W, E, R, T, A, S, D, F, G, C, V, 1-7, 左Ctrl, 左Shift 亮
FN+ 4 Q, W, E, R, A, S, D, F, 1-7 亮
FN+ 5 W, R, A, S, D, 左Ctrl, 左Alt, 左Shift, ↑, ↓, ←, → 亮

以上游戏高手灯光模式可在任意功能模式下, 直接按组合键进入。

自定义按键灯光模式设置方法:

FN+HM=录制键/存储键

FN+ 6-0 均可按FN+HM可进行自定义录制, 定义按键背光颜色。

先按FN+6-0其中任意一个按键后, 再按FN+HM进入录制模式, 可任意按下按键, 七种颜色循环切换, 直到自己喜欢的颜色, 最后按下FN+HM保存, 录制成功。

清除自定义灯光, 先按FN+6-0其中任意一个当前设定的灯光值后, 再按FN+HM, 再次按下FN+HM即可清除成功。

FUNCTION DESCRIPTION:

- Support common game mode key backlight and custom recording key backlight.
- Support 14 kinds cool LED backlight, FN+INS switch backlight sequence.
Starry Sky, Press and off, Mixed light mode, Game master, Never-ending, Press and on, Sinusoidal light wave, Normally on mode, Breathing mode, Colorful neon, Touch and go, Raindrops, Rainbow roulette, Ripples spread.
- Support FN+“/”=5 speed adjustment, support FN+“←/→”direction adjustment under some mode, support FN+“↑/↓” 5 brightness adjustment.
- Support full key without conflict.
- Support Lock WIN function, lock WIN and APP key.
- Support FN+ESC reset function, restore to “Starry Sky” the default light setting.
- Support FN+PS off/on backlight function.

GAME MASTER MODE AND BUTTON CUSTOMIZATION:

FN+ 1 A,S,D,W,↑,↓,←,→,ESC (light)
FN+ 2 A,S,D,W,Lift Ctrl, Lift Shift, Lift Alt, Space, R, G, Q, E, B, 1-5, Tab, F1-F3, HM, END, PU, PD, PS (light)
FN+ 3 Q, W, E, R, T, A, S, D, F, G, C, V, 1-7, Lift Ctrl, Lift Shift (light)
FN+ 4 Q, W, E, R, A, S, D, F, 1-7 (light)
FN+ 5 W, R, A, S, D, Lift Ctrl, Lift Alt, Lift Shift, ↑, ↓, ←, → (light)

The above game superior light mode can enter into directly by pressing combination key in any game mode

THE DEFINITION OF THE BUTTON LIGHT MODE SETTING METHOD:

FN+HM= Recording/store key

FN+ 6-0 All can press FN+HM can be customized recording, setting key backlight color. After press FN+6-0 any of a button first, then press FN+HM start recording mode, press any of a button, 7 colors switching, until the favorite color, and press FN+HM save it, recording success.

Remove custom lighting, press FN+6-0 any of a current setting light value first, then press FN+HM, press again FN+HM, remove success.

灯光特效模式切换顺序：

键盘插入电脑USB上电开机，展开跑马灯效动画，然后进入用户在最后一次使用的功能及灯光模式状态。

- 按FN+INS进入“繁星点点”：
 - 键盘的背光如夜空之点点繁星，五光十色，眨眼闪烁。
 - 通过 FN+DEL闪烁速度和数量可按用户喜好调节。
 - 支持 FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节
- 再次按下FN+INS进入“随按随灭”：
 - 键盘整体背光常亮，亮度/颜色以之前调节的记忆参数为准。
 - 通过 FN+DEL 切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下FN+INS进入“混光模式”：
 - 键盘背光每排一种颜色，像彩带一般。
 - 通过 FN+DEL 呼吸和常亮调节
 - 支持 FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节
- 再次按下FN+INS进入“游戏高手”：
 - 默认设定五组常用游戏按键灯光，按FN+1~5，可进行切换。也可以任意模式下，直接按FN+1~5进入相应背光状态。
 - FN+ 6-0 均可按FN+HM可进行自定义录制，定义按键背光颜色。
 - 先按FN+6-0其中任意一个按键后，再按FN+HM进入录制模式，可任意按下按键，七种颜色循环切换，直到自己喜欢的颜色，最后按下FN+HM保存，录制成功。
 - 清除自定义灯光，先按FN+6-0其中任意一个当前设定的灯光值后，按下FN+HM，再次按下FN+HM即可清除成功。
- 再次按下FN+INS进入“川流不息”：
 - 键盘的背光由右至左或由左至右流动，呈7彩颜色。
 - 支持FN+ “← / →” 组合键，可调光波流动的左右方向。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下FN+INS进入“随按随亮”：
 - 背光关闭，默认情况下，每次按键按下时随即亮起一种背光颜色，松开按键后按键的背光随之延时熄灭，7彩随机。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下FN+INS进入“正弦光波”：
 - 键盘背景为LED关闭状态，一条七彩光波以正弦曲线形式上下波动翻飞，拖尾渐灭。速度越快，拖尾越长。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下FN+INS进入“常亮模式”：
 - 键盘整体背光常亮，亮度以之前调节的记忆参数为准，七彩色可调。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “↑ / ↓” 五级亮度调节。
- 再次按下进入“呼吸模式”：
 - 键盘整体背光模拟呼吸节奏，实现由灭至最高亮度的曲线变化。亮度、颜色及呼吸节奏速度，以之前调节的记忆参数为准。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下进入“七彩霓虹”：
 - 键盘整体背光亮度不变，灯光颜色呈七彩逐色交替变幻，亮度及变幻速度，以之前调节的记忆参数为准。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下进入“一触即发”：
 - 背光关闭，默认情况下，每次按键按下时，该行按键亮起一种背光颜色，向两侧以拖尾方式射出。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下进入“雨滴滑落”：
 - 键盘的背光状如雨滴贴窗滑落，五彩斑斓，时疾时徐。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。
- 再次按下进入“彩虹轮盘”：
 - 键盘背光颜色状如七彩轮盘旋转，逐色交替变幻。
 - 支持FN+ “- / =” 五级速度调节。
 - 支持FN+ “← / →” 可调光波流动的左右方向。
- 再次按下进入“涟漪扩散”：
 - 以按下的按键为中心，向四周波动扩散出一层五颜六色波浪，层层涌动，渐行渐远。
 - 按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。
 - 支持FN+ “- / =” 五级速度调节，FN+ “↑ / ↓” 五级亮度调节。

运营商：香港飞翔科技集团有限公司

制造商：深圳市宝安区智源电子厂 地址：深圳市宝安区5区前进路

Operator:Motospeed Technology Group Limited

Manufacturer: Mototech Technology Group Limited

Address: Qianjin Road,5th District, Bao'an Shenzhen P.R.China

HOTLINE: 4008-860-368

以上数据仅供参考，实物与图片可能不相符！

最终解释权归本公司所有

WWW.MOTOSPEED.CN
WWW.MOTOSPEED.CC

LIGHT EFFECT MODE SWITCHING SEQUENCE:

Plug USB turn on the keyboard, entertaining diversions animation, then enter in last time function and light mode of user.

- Press FN+INS into "Starry Sky":
 - Keyboard backlight looks like starry starry night, multicoloured and blink.
 - Via FN+DEL Blink speed and quantity can be adjusted according to user preferences.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS into "Press and Off":
 - The whole keyboard backlight normally on, brightness/color memory as before.
 - Via FN+DEL switching random colorful and seven colors, total 8 colors available.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS into "Mixed light mode":
 - Keyboard backlight color every row difference, like a ribbon
 - Via FN+DEL breathe and normally on adjustment
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS into "Game master":
 - Default setting 5 groups common used game key light, press FN+1~5, can switchable. Also can press directly under any mode. FN+1~5 into corresponding backlighting mode.
 - FN+ 6-0 All can press FN+HM can be customized recording, setting key backlight color.
 - After press FN+6-0 any of a button first, then press FN+HM start recording mode, press any of a button, 7 colors switching, until the favorite color, and press FN+HM save it. recording success.
 - Remove custom lighting, press FN+6-0 any of a current setting light value first, then press FN+HM, press again FN+HM, remove success.
- Press again FN+INS start "Never-ending":
 - Keyboard backlight from right to left or from left to right flow, with colorful light.
 - Support FN+“← / →” combination key, adjustable optical flow direction
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS start "Press and on":
 - Light-off, by default, every keystroke press lights up a backlight color, backlight delay out while your finger move, 7 colors random.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS start "Sinusoidal light wave":
 - Keyboard LED inactive state, a colorful light in the form of sine curve fluctuates up and down, trailing out gradually. The faster the speed, the longer tail.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again FN+INS start "Normally on mode":
 - The whole keyboard backlight normally on, brightness memory as before. 7 colors adjustable.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“↑ / ↓” 5 brightness adjustment.
- Press again to start "Breathing mode":
 - The whole keyboard backlight simulate breathing rhythm, show curve changes from destroy to the highest brightness. Brightness, color and breath.
 - Rhythm Speed, according to the the parameters of the memory before, Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again to start "Colorful neon":
 - The whole keyboard backlight brightness no changes, light color is colorful color fluctuates, brightness and change speed, according to the the parameters of the memory before.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again to start "Touch and go":
 - Light-off, by default, every time press a key, this row lights up a backlight color, shoot in trailing manner from both sides.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again to start "Raindrops":
 - Keyboard backlight like raindrops stick slip window, particoloured, sometimes fast, sometimes slow.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.
- Press again to start "Rainbow roulette":
 - Keyboard backlight color like colorful wheel spins, color fluctuates.
 - Support FN+“- / =” 5 speed adjustment.
 - Support FN+“← / →” adjustable optical flow direction.
- Press again to start "Ripples spread":
 - Centered on the pressed button, volatility spread a layer colorful wave, sparkling and fade away.
 - Press FN+DEL combination key, switching random colorful light and seven colors, total 8 colors adjustable.
 - Support FN+“- / =” 5 speed adjustment, FN+“↑ / ↓” 5 brightness adjustment.

摩豹官方微博



摩豹微信公众号

