


[WWW.MOTOSPEED.CC](http://WWW.MOTOSPEED.CC)

[WWW.MOTOSPEED.CN](http://WWW.MOTOSPEED.CN)

BORN FOR THE GAME

FN+F1=CD	FN+F2=音量+
FN+F3= 音量-	FN+F4=静音
FN+F5=上一曲	FN+F6=暂停/播放
FN+F7=下一曲	FN+F8=停止
FN+F9=邮件	FN+F10=网址
FN+F11=电脑	FN+F12=计算器

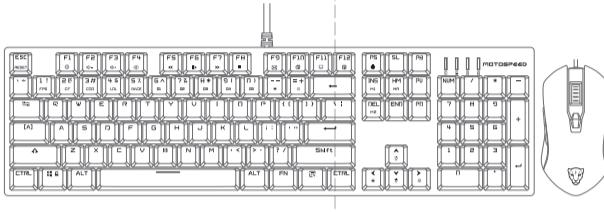

系统要求:

Windows XP/VISTA/WIN7/WIN8/ WIN10

中文  
尺寸:437X128X36MM  
重量:850g  
寿命:50,000,000times(次)  
电流:500mA  
类型:高键帽阶梯设计  
数量:104键, 采用双色键帽技术

Español  
Tamaño: 437X128X36MM  
Peso: 850g  
Vida útil: 50,000,000 veces (veces)  
Corriente: 500mA  
Tipo: alto diseño de escalera keycap  
Cantidad: 104 teclas, tecla de dos colores

Ελληνικά  
Μέγεθος: 437X128X36MM  
Βάρος: 850g  
Διάρκεια ζωής: 50.000.000 φορές (φορές)  
Τρέχουσας: 500mA  
Τύπος: υψηλή κλιμακικά σκάλα σχεδιασμός  
Ποσοτητής: 104 πλήκτρα, δύο κεφαλές

Türk dili  
Boyut: 437X128X36MM  
Ağırlık: 850g  
Ömür boyu: 50.000.000 kez (kez)  
Akım: 500mA  
Tipi: yüksek tuş şarj merdiveni tasarımı  
Miktar: 104 tuş, iki renkli tuş takımı

Deutsch  
Größe: 437X128X36MM  
Gewicht: 850g  
Lebensdauer: 50.000.000 mal (mal)  
Strom: 500mA  
Typ: Leiterentwurf mit hoher Schlüsselkappe  
Anzahl: 104 Tasten, zweifarbige Tastenkappe

System Requirements:

Windows XP/VISTA/WIN7/WIN8/ WIN10

English  
Size: 437X128X36MM  
Weight: 850g  
Lifetime: 50,000,000times (times)  
Current: 500mA  
Type: high keycap ladder design  
Quantity: 104 keys, two-color keycap

Português  
Tamanho: 437X128X36MM  
Peso: 850g  
Tempo de vida: 50.000.000 vezes (vezes)  
Corrente: 500mA  
Tipo: design de escada alta keycap  
Quantidade: 104 teclas, keycap de duas cores

Українська  
Розмір: 437X128X36ММ  
Вага: 850г  
Термін служби: 50 000 000 разів (разів)  
Струм: 500mA  
Тип: високоякісний дизайн сходах клієнчів  
Кількість: 104 клієнчі, двокольоровий кейсар

System Parameters  
系统参数

**SYNOPSIS**  
GAMING KEYBOARD

**Ck888** GAMING KEYBOARD

FN+F1=CD  
FN+F2=volume+  
FN+F3= volume-  
FN+F4=Mute  
FN+F5=Previous song  
FN+F6=Pause/Play  
FN+F7=Next song  
FN+F8=Stop  
FN+F9=Mail  
FN+F10=URL  
FN+F11=Computer  
FN+F12=Calculator

FN+F1=CD  
FN+F2=volume+  
FN+F3= volume-  
FN+F4=Mute  
FN+F5=Previous song  
FN+F6=Pause/Play  
FN+F7=Next song  
FN+F8=Stop  
FN+F9=Mail  
FN+F10=URL  
FN+F11=Computer  
FN+F12=Calculator

FUNCTION DESCRIPTION:

1. Support common game mode key backlight and custom recording backlit function.  
Standard Edition: The FN+1 to 5 key lights up for the fixed game mode button.

2. Support 14 kinds of super bright LED lighting effects. (Stars, with the press with out, mixed light mode, game master, flow, with the press with bright, sinusoidal light wave, constant bright mode, breathing mode, colorful neon, touch and go, raindrops fall, rainbow disc, ripples spread )

3. Support FN + " - / = " five-speed adjustment, support FN + "← / →" in the individual mode direction adjustment, support FN + "↑ / ↓" five-level brightness adjustment.

4. Support full key without punch.

5. Support lock WIN function and LED light effect indication, while locking WIN and lock APP key, Win Lock always lights up, after unlocking, Win Lock is off

6. Support FN + ESC reset function, restore to the "Starry" default lighting settings.

7. Support FN+PS off/on backlight function.

GAME MASTER MODE SETTINGS:

FN+1=Game Mode 1 (FPS First Person Shooting Game)-ASDW↑←→ESC Bright  
FN+2=play mode 2 (CF crossfire)-ASDW left Ctrl left Shift left Alt Space RGQEB 1-5 Tab F1-F3 HM END PU PD PS bright  
FN+3=Game Mode 3 (COD Call of Duty)-QWERTASDFGCV 1-7 Left Ctrl Left Shift Bright  
FN+4=Game Mode 4 (LOL League of Legends)-QWERASDF 1-7 Bright  
FN+5=Game Mode 5 (QQrace Racing)-WRASD Left Ctrl Left Alt Left Shift ↑ ↓ ←→Bright

LIGHT EFFECT MODE SWITCHING SEQUENCE:


Plug in the USB to boot, expand the horse racing effect animation, and then enter the user's last used function and light mode status.

- Press FN+INS to enter the "Starry Point": the backlight of the keyboard is like a star in the night sky, with five colors and ten eyes. The speed and number of flashing through FN+DEL can be adjusted according to user preferences. Support FN + " - / = " five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment
- Press FN+INS to enter "Follow the button": the overall backlight of the keyboard is always on, and the brightness/color is based on the previously adjusted memory parameters. Switch between random and 7-color with FN+DEL, a total of 8 colors can be adjusted. Support FN + " - / = " five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press FN+INS to enter the "mixed mode": the keyboard backlight is one color per row, like a ribbon. Adjusted by FN+DEL breath and constant light. Support FN + " - / = " five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment
- Press FN+INS to enter the "Game Master": By default, five sets of commonly used game button lights are set, and FN+1~5 can be used to switch. Can also be pressed directly in any mode FN+1~5 enters the corresponding backlight state. FN+ 6-0 can be customized by FN+HM to define the backlight color of the button. Press any button of FN+6-0 first, then press FN+HM to enter the recording mode. At this time, the four indicator LEDs in the upper right corner Blinking, you can press any button, the seven colors cycle to the color you like, and finally press FN+HM to save. The four indicator LEDs stop flashing and the recording is successful. To clear the custom light, first press any of the currently set light values of FN+6-0, then press FN+HM, then the upper right corner. The four indicator LEDs flash, press FN+HM again, and the four indicator LEDs stop flashing, and the clearing is successful.

BORN FOR THE GAME

- 按FN+INS进入“川流不息”：键盘的背光由右至左或由左至右流动，呈7彩颜色。  
支持FN+“←/→”组合键，可调光波流动的左右方向。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 按FN+INS进入“随波逐流”：背光关闭，默认情况下，每次按键按下时随即亮起一种背光颜色，松开按键后按键的背光随之延时熄灭，7彩随机。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 按FN+INS进入“正弦光波”：键盘背景为LED关闭状态，一条七彩光波以正弦曲线形式上下波动翻飞，拖尾渐灭。速度越快，拖尾越长。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 按FN+INS进入“常亮模式”：键盘整体背光常亮，亮度以之前调节的记忆参数为准，七彩色可调。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“↑ / ↓”五级亮度调节。
- 再次按下进入“呼吸模式”：键盘整体背光模拟呼吸节奏，实现由灭至最高亮度的曲线变化。  
亮度、颜色及呼吸节奏速度，以之前调节的记忆参数为准。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 再次按下进入“七彩霓虹”：键盘整体背光亮度不变，灯光颜色呈七彩逐色交替变幻，亮度及变幻速度，以之前调节的记忆参数为准。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 再次按下进入“一触即发”：背光关闭，默认情况下，每次按键按下时，该行按键亮起一种背光颜色，向两侧以拖尾方式射出。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 再次按下进入“雨滴滑落”：键盘的背光状如雨滴贴窗滑落，五彩斑斓，时疾时徐。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。
- 再次按下进入“彩虹轮盘”：键盘背光颜色状如七彩轮盘旋转，逐色交替变幻。  
支持FN+“- / =”五级速度调节。
- 再次按下进入“涟漪扩散”：  
以按下的按键为中心，向四周波动扩散出一层五颜六色波浪，粼粼涌动，渐行渐远。  
按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。  
支持FN+“- / =”五级速度调节，FN+“↑ / ↓”五级亮度调节。

- Press FN+INS to enter the "streaming flow":  
The backlight of the keyboard flows from right to left or from left to right, in seven colors.  
Support FN+ "←/→" key combination to adjust the left and right direction of light flow.  
Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press FN+INS to enter "Follow the light":The backlight is turned off. By default, a backlight color is illuminated each time the button is pressed, and the button is released after the button is released. The backlight is then extinguished with a delay of 7 colors.Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.  
Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press FN+INS to enter the "sinusoidal light wave":The background of the keyboard is the LED off state, and a colorful light wave fluctuates up and down in a sinusoidal form, and the tail is gradually extinguished. speed The faster, the longer the tail. Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.  
Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press FN+INS to enter the "normal light mode":The overall backlight of the keyboard is always bright, and the brightness is based on the previously adjusted memory parameters, and the seven colors are adjustable. Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.  
Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press again to enter "Breath Mode":The overall backlight of the keyboard simulates the breathing rhythm, achieving a curve change from extinction to maximum brightness. Brightness, color and breathing The rhythm speed is based on the previously adjusted memory parameters.Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable. Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press again to enter the "Colorful Neon":The overall backlight brightness of the keyboard is unchanged, and the color of the light changes alternately with color and color. The brightness and the speed of change are before. The adjusted memory parameters shall prevail.  
Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press again to enter "One Touch":The backlight is off. By default, each time the button is pressed, the button lights up in a backlight color, trailing to the sides. The way to shoot. Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable. Support FN + "- / =" five-level speed adjustment, FN + "↑ / ↓" five-level brightness adjustment.
- Press again to enter "Rainbow Roulette":The color of the keyboard backlight is like a colorful roulette wheel, and the color changes alternately.  
Support FN + "- / =" five-speed adjustment.  
Supports FN+ "←/→" to adjust the left and right direction of light flow.
- press again to enter "ripple diffusion" : To press the button as the center, to all around the wave spread out a layer of colorful waves, sparkling surging, gradually line gradually far. Press FN+DEL key combination, switch random 7 colors and 7 monochrome, a total of 8 colors can be adjusted.  
Support FN+ "- / =" five-level speed adjustment, FN+ "↑/↓" five-level brightness adjustment.

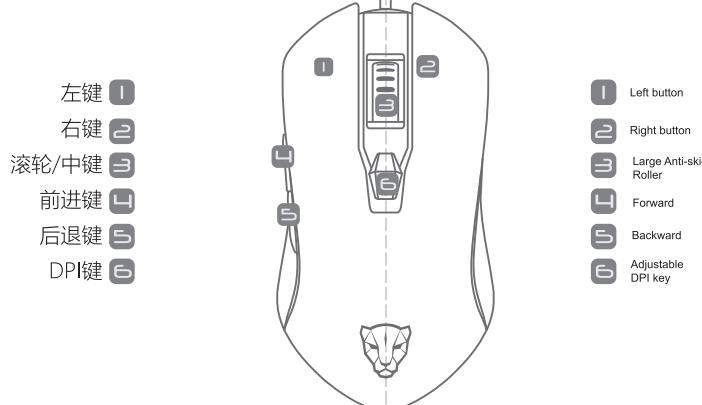

鼠标特性

按键寿命: 2000万次  
SPI采样时间: 2ms  
图像处理FPS: 4000帧/秒  
DPI模式: 800-1000-1600-2400DPI

尺寸: 128x67x41mm  
USB刷新率: 500HZ  
最大速度: 48IPS  
加速度: 10g

Mouse parameters

Switch Life: 20 million  
SPI Sampling time: 2ms  
Frame rate: 4000 FPS  
DPI mode: 800/1000/1600/2400DPI

Dimension: 128x67x41mm  
USB Refresh rate: 500HZ  
Maximum Tracking Speed: 48IPS  
Maximum Acceleration: 10g

运营商：香港飞翔科技集团有限公司

制造商：深圳市宝安区智灏电子厂 地址：深圳市宝安5区前进路

Operator:Motospeed Technology Group Limited  
Manufacturer: Mototech Technology Group Limited  
Address: Qianjin Road,5th District, Bao' an Shenzhen Pr.China

HOTLINE: 4008-860-368

以上数据仅供参考，实物与图片可能不相符！

最终解释权归本公司所有

[WWW.MOTOSPEED.CN](http://WWW.MOTOSPEED.CN)

[WWW.MOTOSPEED.CC](http://WWW.MOTOSPEED.CC)

摩豹官方微博

摩豹微信公众号

