


FN+F1= 播放器  
FN+F2= 音量减  
FN+F3= 音量加  
FN+F4= 静音  
FN+F5= 停止  
FN+F6= 上一曲  
FN+F7= 暂停/播放  
FN+F8= 下一曲  
FN+F9= E-mail  
FN+F10= 浏览器  
FN+F11= 我的电脑  
FN+F12= 计算器

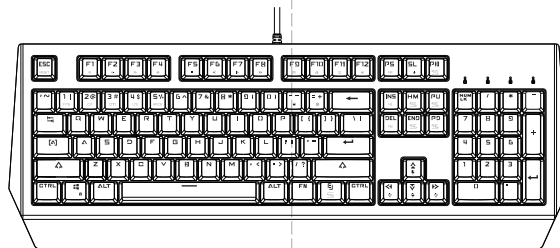

FN+F1= player  
FN+F2= Volume -  
FN+F3= Volume +  
FN+F4= Mute  
FN+F5= Stop  
FN+F6= Prev Track  
FN+F7= Pause/Play  
FN+F8= Next Track  
FN+F9= E-mail  
FN+F10= Internet  
FN+F11= My computer  
FN+F12= Calculator

系统要求:

WIN2000/XP/VISTA/WIN7/WIN8/WIN10  
IBM或是兼容电脑

System Requirements:

WIN2000/XP/VISTA/WIN7/WIN8/WIN10  
IBM or compatible computer

中文  
按键寿命: 5000万次  
工作电压: +5V±5%  
使用最大电流: 500mA  
重量: 1323g±20g  
尺寸: 468x172x35mm

English

Key life: 50 million times  
Working voltage: +5V±5%  
Maximum current used: 500mA  
Weight: 1323g ± 20g  
Size: 468x172x35mm

Español  
Vida clave: 50 millones de veces  
Voltaje de trabajo: + 5V ± 5%  
Corriente máxima utilizada: 500 mA  
Peso: 1323g ± 20 g  
Tamaño: 468x172x35mm

Türk dili  
Anahtar yaşam: 50 milyon kez  
Çalışma gerilimi: + 5V ± 5%  
Kullanılan maksimum akım: 500mA  
Ağırlık: 1323g ± 20g  
Ebat: 468x172x35mm

Português  
Vida chave: 50 milhões de vezes  
Tensão de trabalho: + 5V ± 5%  
Corrente máxima usada: 500mA  
Peso: 1323g ± 20g  
Tamanho: 468x172x35mm

Українська  
Основне життя: 50 мільйонів разів  
Робоча напруга: + 5В ± 5%  
Максимальний використаний струм: 500mA  
Вага: 1323г ± 20г  
Розмір: 468x172x35mm

Ελληνικά  
Κύρια ζωή: 50 εκατομμύρια φορές  
Τάση λειτουργίας: + 5V ± 5%  
Μέγιστο ρεύμα που χρησιμοποιείται: 500mA  
Βάρος: 1323g ± 20g  
Μέγεθος: 468x172x35mm

Deutsch  
Schlüssellebensdauer: 50 Millionen Mal  
Arbeitsspannung: + 5V ± 5%  
Maximaler verwendeter Strom: 500mA  
Gewicht: 1323g ± 20g  
Größe: 468x172x35mm

Polski  
Kluczowe życie: 50 milionów razy  
Napięcie robocze: + 5 V ± 5%  
Maksymalny zastosowany prąd: 500mA  
Waga: 1323 g ± 20 g  
Rozmiar: 468 x 172x 35 mm

System Parameters  
系统参数

功能说明:

- 支持常用游戏模式按键背光及自定义录制按键背光功能。  
标准版: FN+1至5键为固定游戏用户模式按键点亮。
- 支持12种酷炫LED灯光特效。  
繁星点点, 激光模式, 波浪模式, 霓虹模式, 雨滴模式, 涟漪模式, 波浪模式2, 漩涡模式, 静态模式, 呼吸模式, 渐亮跑马, 即按即亮。
- 支持全键无冲。
- 支持锁WIN功能及LED灯效指示, 同时锁住WIN和锁APP键后, Win Lock常亮指示, 解锁后, Win Lock灭
- 支持FN+ESC复位功能, 恢复到“繁星点点”默认灯光设置。
- 支持FN+SL正面关/开背光功能
- 支持FN+PS自定义录图功能

用户模式调节:

FN+(1-5)为出厂设置游戏模式灯光图形  
FN+1=游戏模式1 (FPS第一人称射击游戏) -ASDW↑↓←→ESC亮  
FN+2=游戏模式2 (CF穿越火线) -F1-F3 1-5 QWERTASDGB Space  
左Ctrl 左Alt 左Shift Tab HM END PU PD亮  
FN+3=游戏模式3 (COD使命召唤) -QWERTASDFGCV 1-7 左Ctrl 左Shift亮  
FN+4=游戏模式4 (LOL英雄联盟) -QWERTASDF 1-7亮  
FN+5=游戏模式5 (QRace赛车) -WRASD 左Ctrl 左Alt 左Shift ↑↓←→亮  
以上灯光图形可在任意功能模式下, 直接按组合键进入。

灯光图形设置:

FN+PS进入录图模式, 此时(1-5)按键的红色灯闪烁提示, 先按(1-5)其中任意一个按键后, 进入录制模式, 此时右上角的四个指示蓝色LED 闪烁, 可任意按下按键, 七种颜色循环切换, 直到自己喜欢的颜色, 最后按下FN+PS保存, 四个指示LED 停止闪烁, 录制成功

键盘周围背光灯效调节:

FN+ HM 跑马, 霓虹, 静态, 呼吸 四种模式切换  
FN+ END 调节周围七种独立颜色  
FN+ PU 调节周围亮度五级循环  
FN+ PD 调节周围速度五级循环  
FN+ PB 调节周围跑马灯效方向  
FN+ APP 调节周围跑马灯效停止或开启

FUNCTION DESCRIPTION:

- Support common game mode button backlight and custom recording button backlight function. Standard Edition: FN + 1 to 5 keys for the fixed game user mode button lit.
- Support 12 kinds of stunning LED lighting effects.  
Starry, Laser mode, Wave mode, Neon mode, Raindrop mode, Ripples mode, Wave mode 2, Whirlpool mode, Static mode, Breathing mode, Flickering, Instant press.
- Support full key no red.
- Support the lock WIN function and LED light effect instructions, while locking WIN and lock APP key, Win Lock instructions, unlock, Win Lock off
- Support FN + ESC reset function, return to the "starry" default lighting settings.
- Support FN + SL front off / on backlight function
- Support FN + PS custom recording function

USER MODE ADJUSTMENT:

FN+(1-5) is the factory setting game mode lighting graphics  
FN+1=Game Mode 1 (FPS First Person Shooter) -ASDW ↑ ↓ ← → ESC On  
FN+2=Play Mode 2 (CF Cross Fire) -F1-F3 1-5 QWERTASDGB Space Left Ctrl  
Left Alt Left Shift Tab HM END PU PD On  
FN+3=Game Mode 3 (COD Call of Duty) -QWERTASDFGCV 1-7 Left Ctrl Left Shift Left  
FN+4=Game Mode 4 (LOL League of Legends) -QWERTASDF 1-7 On  
FN+5=Game Mode 5 (QRace Racing) -WRASD Left Ctrl Left Alt Left Shift ↑ ↓ ← → On  
The above light graphics can be in any function mode, press the key combination to enter.

LIGHT GRAPHIC SETTINGS:

FN+PS to enter recording mode, then (1-5) red light flashes prompt, press (1-5) any one of the keys to enter the recording mode, then the upper right corner of the four instructions blue LED Flashes, you can press the button, the seven color cycle switch until your favorite color, and finally press FN + PS save, four indicator LED stop flashing, the recording is successful.

KEYBOARD BACKLIGHT BACKLIGHT ADJUSTMENT:

FN+ HM Happy Valley, neon, static, breathing four modes to switch  
FN+ END Adjust the circle of seven separate colors  
FN+ PU adjust the brightness of five weeks cycle  
FN+ PD adjust the cycle speed of five cycles  
FN+ PB adjust the direction of the circle race light  
FN+ APP Adjustment Circle Marquee Stop or On

### 灯光特效模式切换顺序:

- 按FN+INS进入“繁星点点”:  
键盘的背光如夜空之点点繁星,五光十色,眨眼闪烁。  
按 FN+DEL 闪烁速度和数量可按用户喜好调节。  
支持 FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节
- 按FN+INS进入“激光模式”:  
键盘整体背光关闭,亮度/速度以之前调节的记忆参数为准,颜色可调。  
按FN+DEL组合键,切换随机七彩和7单色,共8种颜色可调。  
支持 FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节
- 按FN+INS进入“波浪模式”:  
键盘的背光由左至右或由右至左流动,呈7彩颜色。  
支持FN+“←/→”组合键,可调光波流动的左右方向。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 再次按下进入“霓虹模式”:  
键盘整体背光亮度不变,灯光颜色呈七彩逐色交替变幻,亮度及变幻速度,以之前调节的记忆参数为准。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 再次按下进入“雨滴模式”:  
键盘的背光状如雨滴贴窗滑落,五彩斑斓,时疾时徐。  
按FN+DEL组合键,切换随机七彩和7单色,共8种颜色可调。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 再次按下进入“涟漪模式”:  
以按下的按键为中心,向四周波动扩散出一层五颜六色波浪,粼粼涌动,渐行渐远。  
按FN+DEL组合键,切换随机七彩和7单色,共8种颜色可调。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 按FN+INS进入“波浪模式2”:  
键盘的背光呈7彩颜色,由内向外扩散或者由外向内收拢。  
支持FN+“←/→”组合键,可调光波流动的内外方向。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 再次按下进入“旋涡模式”:  
键盘背光颜色犹如轮盘旋转。  
按FN+DEL组合键,切换随机七彩和7单色,共8种颜色可调。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节  
支持FN+“←/→” 可调轮盘旋转方向。
- 按FN+INS进入“静态模式”:  
键盘整体背光常亮,亮度以之前调节的记忆参数为准,七色可调。  
按FN+DEL组合键,可切换7种颜色及自动循环跳变。  
支持 FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节
- 再次按下进入“呼吸模式”:  
键盘整体背光模拟呼吸节奏,实现由灭至最高亮度的曲线变化。亮度、颜色及呼吸节奏速度,以之前调节的记忆参数为准。  
按FN+DEL组合键,可切换7种颜色及自动循环跳变。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 按FN+INS进入“渐亮跑马”:  
键盘的背光LED由左至右,逐颗点亮后,呈拖尾而行,渐行渐灭。  
逐行向下再由右至左依次划过,左右交替,逐行下行。  
按FN+DEL组合键,可切换7种颜色及自动循环跳变。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节。
- 按FN+INS进入“即按即亮”:  
背光关闭,默认情况下,每次按键按下时随即亮起一种背光颜色,松开按键后按键的背光随之熄灭。  
按FN+DEL组合键,可切换7种颜色及自动循环跳变。  
支持FN+“-/=” 五级速度调节, FN+“↑/↓” 五级亮度调节

### LIGHT EFFECT MODE SWITCHING SEQUENCE:

- Press FN + INS to enter Starry:  
Backlight of the keyboard, such as the night sky stars, colorful, blinking blink of an eye.  
Press FN + DEL to blink speed and quantity to adjust according to user's preference.  
Support FN + “-/=” Five speed adjustment, FN + “↑/↓” Five brightness adjustment
- Press FN + INS to enter “laser mode”:  
The overall backlight off the keyboard, brightness / speed to adjust the memory parameters prior to prevail, the color is adjustable.
- Press FN + DEL key combination, switch random colorful and 7 monochrome, a total of 8 colors adjustable.  
Support FN + “-/=” Five speed adjustment, FN + “↑/↓” Five brightness adjustment
- Press FN + INS to enter “Wave Mode”:  
The keyboard backlight from left to right or from right to left flow, was 7 color.  
Support FN + “←/→” key combination, adjustable light wave left and right direction of flow.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press again to enter “Neon mode”:  
The overall brightness of the keyboard backlight the same, the color of the light was colorful color changes alternately, brightness and speed of change to before Adjust the memory parameters prevail.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press again to enter Raindrop mode:  
The backlit keyboard like rain drop window sliding, colorful, when the disease Xu.  
Press FN + DEL key combination, switch random colorful and 7 monochrome, a total of 8 colors adjustable.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press again to enter “Ripple Mode”:  
To press the button as the center, to spread around a layer of colorful waves, sparkling surging, lopsided.  
Press FN + DEL key combination, switch random colorful and 7 monochrome, a total of 8 colors adjustable.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press FN + INS to enter “Wave Mode 2”:  
The back of the keyboard is a color 7 colors, diffused from the inside out or from outside to inside collapsed.  
Support FN + “←/→” key combination, adjustable light wave flow inside and outside direction.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press again to enter “vortex mode”:  
Keyboard backlight color like roulette rotation.  
Press FN + DEL key combination, switch random colorful and 7 monochrome, a total of 8 colors adjustable.  
Support FN + “-/=” Five speed adjustment, FN + “↑/↓” Five brightness adjustment  
Support FN + “←/→” Adjustable wheel rotation direction.
- Press FN + INS to enter “static mode”:  
The overall backlight of the keyboard is always on and the brightness is adjusted according to the previous memory parameters, with seven colors adjustable.  
Press FN + DEL key combination, can switch 7 colors and automatic cycle jump.  
Support FN + “-/=” Five speed adjustment, FN + “↑/↓” Five brightness adjustment
- Press again to enter Breathing mode:  
The overall backlighting of the keyboard simulates the breathing rhythm and realizes the curve change from the maximum brightness to the maximum. Brightness, color and breathing  
Rhythm speed, to adjust the memory parameters prior to prevail.  
Press FN + DEL key combination, can switch 7 colors and automatic cycle jump.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press FN + INS to enter “Progressive Horse”:  
Backlight LED keyboard from left to right, one by one after the light, the trailing line, gradually disappear. Line by line down and then from right to left  
Times across, alternating around, line by line down.  
Press FN + DEL key combination, can switch 7 colors and automatic cycle jump.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.
- Press FN + INS to enter “press and light”:  
Backlight off, by default, each time the button is pressed, it lights up a backlight color, release the button after the button  
The backlight then goes off.  
Press FN + DEL key combination, can switch 7 colors and automatic cycle jump.  
Support FN + “-/=” five speed adjustment, FN + “↑/↓” five brightness adjustment.

运营商: 香港飞翔科技集团有限公司

制造商: 深圳市宝安区智源电子厂 地址: 深圳市宝安区5区前进路

Operator: Motospeed Technology Group Limited

Manufacturer: Mototech Technology Group Limited

Address: Qianjin Road, 5th District, Bao'an Shenzhen P.R.China

HOTLINE: 4008-860-368

以上数据仅供参考, 实物与图片可能不相符!

最终解释权归本公司所有

WWW.MOTOSPEED.CN  
WWW.MOTOSPEED.CC

摩豹官方微博



摩豹微信公众号

