


FN+F1=电脑
FN+F2=网址
FN+F3=邮件
FN+F4=播放
FN+F5=上一曲
FN+F6=下一曲
FN+F7=暂停/播放
FN+F8=停止
FN+F9=搜索
FN+F10=收藏夹
FN+F11=静音
FN+F12=计算器

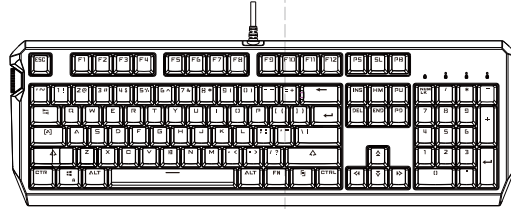

FN+F1=Computer
FN+F2=URL
FN+F3=Mail
FN+F4=Player
FN+F5=Previous piece
FN+F6=Next track
FN+F7=Pause/play
FN+F8=Stop
FN+F9=Search for
FN+F10=Favorites
FN+F11=Mute
FN+F12=Calculator

系统要求:

Windows XP//VISTA/WIN7/WIN8/ WIN10 /MAC

System Requirements:

Windows XP//VISTA/WIN7/WIN8/ WIN10 /MAC

中文
产品尺寸:465X 151X33MM
重量:1245g
寿命:50,000,000times(次)
电流:300mA
类型:高键帽阶梯设计
数量:104键, 采用双色键帽技术

English
Size: 465X151X33MM
Weight: 1245g
Lifetime: 50,000,000times (times)
Current: 300mA
Type: high keycap ladder design
Quantity: 104 keys, two-color keycap

Español
Tamaño: 465X151X33MM
Peso: 1245g
Vida útil: 50.000.000 veces (veces)
Corriente: 300mA
Tipo: alto diseño de escalera keycap
Cantidad: 104 teclas, tecla de dos colores

Türk dili
Boyut: 465X151X33MM
Ağırlık: 1245g
Ömür boyu: 50,000,000 kez (kez)
Akım: 300mA
Tipi: yüksek tuş şarj merdiveni tasarımı
Miktar: 104tuş, iki renkli tuş takımı

Português
Tamanho: 465X151X33MM
Peso: 1245g
Tempo de vida: 50.000.000 vezes (vezes)
Corrente: 300mA
Tipo: design de escada alta keycap
Quantidade: 104 teclas, keycap de duas cores

Українська
Розмір: 465X151X33MM
Вага: 1245г
Термін служби: 50 000 000 разів (разів)
Струм: 300mA
Тип: високоякісний дизайн схожих ключів
Кількість: 104 ключі, двокольоровий кейсап

Ελληνικά
Μέγεθος: 465X151X33MM
Βάρος: 1245g
Διάρκεια ζωής: 50.000.000 φορές (φορές)
Ρεύμα: 300mA
Τύπος: υψηλή κλίμακα σκάλα σχεδιασμού
Ποσότητα: 104 πλήκτρα, δύο χρωμάτων

Deutsch
Größe: 465X151X33MM
Gewicht: 1245g
Lebensdauer: 50.000.000 mal (mal)
Strom: 300mA
Typ: Leiterentwurf mit hoher Schlüsselkappe
Anzahl: 104 Tasten, zweifarbige Tastenkappe

Polski
Rozmiar: 465 x 151x 33 mm
Ciężar: 1245g
Ciepota: 50 000 000 razy (razy)
Napięcie prądu: 300 mA
Typ: konstrukcja wysokiej drabinki na klawczy
Ilość: 104 klawczy, dwukolorowe nasadki

System Parameters
系统参数

功能说明:

- 支持常用游戏模式按键背光及自定义录制按键背光功能。
- 标准版: FN+1至5键为固定游戏用户模式按键点亮。
- 支持15种超炫LED灯光特效。
流光模式, 常亮模式, 霓虹模式, 呼吸模式, 即按即亮, 旋转模式, 正弦光波, 波浪模式, 涟漪模式, 七彩喷泉, 交通模式, 冲浪模式, 雨滴模式, 渐亮跑马, 繁星点点
- 支持全键无冲。
- 支持锁WIN功能及LED灯效指示, 同时锁住WIN和锁APP键后, Win Lock常亮指示, 解锁后, Win Lock灭
- 支持电位器旋钮调节音量和亮度: 出厂默认为音量调节, 按下旋钮开关时, 为灯光亮度调节 (正面)
- 支持FN+ESC复位功能, 恢复到“流光模式”默认灯光设置。
- 支持FN+SL正面关/开背光功能
- 支持自定义录图功能

灯光图形设置:

FN+ (6 -- =) 进入自定义模式, 先按(6 -- =)其中任意一个按键后, 进入录制模式, 此时(FN和PAUSE)按键的红色灯点亮提示, 再同时按下(FN和PAUSE)键, 红色指示灯闪烁, 可任意按下按键, 七种颜色循环切换, 直到自己喜欢的颜色, 最后按下(FN和PAUSE)保存, 红色指示灯LED停止闪烁, 录制成功。

如需清除当前自定义的灯光, 可直接按FN+ESC

FUNCTION DESCRIPTION:

- Support common game mode button backlight and custom recording button backlight function.
- Standard Edition: The FN+1 to 5 button lights up for the Fixed Game User Mode button.
- Support 15 super bright LED lighting effects. Streamer mode, constant light mode, neon mode, breathing mode, ie, light up, rotation mode, sinuous light wave, wave mode, squat mode, colorful fountain, traffic mode, surf mode, raindrop mode, faded horse race, starry little
- Support full key without punch.
- Support lock WIN function and LED light effect indication, while locking WIN and lock APP key, Win Lock always lights up, after unlocking, Win Lock is off
- Support potentiometer knob to adjust volume and brightness: the factory default is volume adjustment, when the knob switch is pressed, the brightness is adjusted (front)
- Support FN+ESC reset function, return to the "streamer mode" default light settings.
- Support FN+SL front side off / on backlight function
- Support for custom recording function

LIGHT GRAPHIC SETTINGS:

1FN+(6 -- =) enters the custom mode. After pressing (6 -- =) one of the buttons, enter the recording mode. At this time (FN and PAUSE), the red light of the button lights up, and then press (FN and PAUSE), the red indicator light flashes, you can press any button, the seven colors cycle to the color you like, and finally press (FN and PAUSE) to save, the red indicator LED stops flashing, and the recording is successful.

To clear the current custom light, press FN+ESC directly

灯光特效模式切换顺序:

- 按FN+PRTS/C进入“流光模式”:
键盘背光由左至右缓缓流动,呈7彩颜色。支持FN+“←/→”五级速度调节,支持旋钮亮度调节,支持FN+END调节流光暂停/开启。
- 再次按下FN+PRTS/C进入“常亮模式”:
键盘整体背光常亮,亮度以之前调节的记忆参数为准。按FN+INS/DEL组合键,可切换7种颜色。支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“霓虹模式”:
键盘整体背光亮度不变,灯光颜色呈七彩逐色交替变幻,亮度及变幻速度,以之前调节的记忆参数为准。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“呼吸模式”:
键盘整体背光模拟呼吸节奏,实现由灭至最高亮度的曲线变化。亮度、颜色及呼吸节奏速度,以之前调节的记忆参数为准。按FN+INS/DEL组合键,可切换7种颜色及自动循环跳变。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“即按即亮”:
背光关闭,默认情况下,每次按键按下时随即亮起一种背光颜色,松开按键后按键的背光随之延时熄灭。按FN+INS/DEL组合键,可切换7种颜色及自动循环跳变。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“旋转模式”:
键盘背光颜色状如七彩轮盘旋转,逐色交替变幻。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“正玄光波”:
键盘的背光由左向右流动,犹如一条七彩光波以正弦曲线形式上下波动翻飞,拖尾渐灭。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“波浪模式”:
键盘的背光呈7彩颜色,由外向内逐色交替收拢。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“涟漪模式”:
以按下的按键为中心,向四周波动扩散出一层五颜六色波浪,渐(翻)涌,渐行渐远。按FN+INS/DEL组合键,切换随机七彩和7单色,共8种颜色可调。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“七彩喷泉”:
键盘的背光呈7彩颜色,由内向外逐色交替扩散。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“交通模式”:
键盘的背光呈7彩颜色,由左至右或由右至左依次划过,左右交替,逐行下行,逐颗点亮后,呈拖尾而行,渐行渐灭。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“冲浪模式”:
键盘的背光由左至右或由右至左流动,呈7彩颜色。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“雨滴模式”:
键盘的背光状如雨滴贴窗滑落,五彩斑斓,时疾时徐。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“闪亮跑马”:
键盘的背光呈7彩颜色LED由左至右,逐颗点亮后,拖尾而行,渐行渐灭。逐行向下再由右至左依次划过,左右交替,逐行下行。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。
- 再次按下FN+PRTS/C进入“繁星点点”:
键盘的背光如夜空之点点繁星,五光十色,眨眼闪烁。支持FN+“←/→”五级速度调节,支持旋钮亮度调节。

键盘周围背光灯效调节:

- FN+ HM 跑马,霓虹,静态,呼吸 四种模式切换
- FN+ PGUP 调节周围七种独立颜色
- FN+ PGND 调节周围亮度五级循环
- FN+ APP 调节周围跑马灯停止或开启

运营商:香港飞翔科技集团有限公司
 制造商:深圳市宝安区智源电子厂 地址:深圳市宝安区前进路
 Operator:Motospeed Technology Group Limited
 Manufacturer: Mototech Technology Group Limited
 Address: Qianjin Road, 5th District, Bao'an Shenzhen P.R.China
 HOTLINE: 4008-860-368
 以上数据仅供参考,实物与图片可能不相符!
 最终解释权归日本公司所有
WWW.MOTOSPEED.CN
WWW.MOTOSPEED.CC

LIGHT EFFECT MODE SWITCHING SEQUENCE:

1. Press FN+PRTS/C to enter "Streaming Mode":
The keyboard backlight flows slowly from left to right and is in 7 colors. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment, support FN+END to adjust streamer pause/on.
2. Press FN+PRTS/C again to enter "Normally Bright Mode":
The overall backlight of the keyboard is always bright, and the brightness is based on the previously adjusted memory parameters. Press the FN+INS/DEL key combination to switch between 7 colors. Support knob brightness adjustment.
3. Press FN+PRTS/C again to enter the neon mode:
The overall backlight brightness of the keyboard is unchanged, and the color of the light is alternately changed in color and color, and the brightness and the speed of change are subject to the previously adjusted memory parameters. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
4. Press FN+PRTS/C again to enter "Breath Mode":
The overall backlight of the keyboard simulates the breathing rhythm, achieving a curve change from extinction to maximum brightness. Brightness, color, and breathing rhythm speed, based on previously adjusted memory parameters. Press the FN+INS/DEL key combination to switch between 7 colors and automatic loop jump. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
5. Press FN+PRTS/C again to enter "Press to Light":
The backlight is turned off. By default, a backlight color is illuminated each time the button is pressed. When the button is released, the backlight of the button is turned off. Press the FN+INS/DEL key combination to switch between 7 colors and automatic loop jump. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
6. Press FN+PRTS/C again to enter "Rotation Mode 1":
The color of the keyboard backlight is like a colorful roulette wheel, and the color changes alternately. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
7. Press FN+PRTS/C again to enter "Zheng Xuanguangbo":
The backlight of the keyboard flows from left to right, just like a colorful light wave undulating in the form of a sinusoidal curve, and the tail is gradually extinguished. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
8. Press FN+PRTS/C again to enter Wave Mode:
The backlight of the keyboard is in 7 colors, which are alternately folded from the outside to the inside. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
9. Press FN+PRTS/C again to enter "ripple mode":
Centering on the pressed button, a wave of colorful waves spreads around the waves, and the rushing and fading away. Press FN+INS/DEL to switch between random and 7-color, a total of 8 colors. Tune. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
10. Press FN+PRTS/C again to enter the "Colorful Fountain":
The backlight of the keyboard is in 7 colors, which are alternately diffused from the inside to the outside. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
11. Press FN+PRTS/C again to enter "Traffic Mode":
The backlight of the keyboard is in 7 colors, which are drawn from left to right or from right to left. The left and right alternately, descending line by line, after lighting one by one, it is trailing and fading.
12. Press FN+PRTS/C again to enter "surf mode"
The backlight of the keyboard flows from left to right or from right to left. It is in 7 colors. It supports FN+ "← / →" five-speed adjustment and supports knob brightness adjustment.
13. Press FN+PRTS/C again to enter Raindrop Mode:
The backlight of the keyboard is like a raindrop sticking down the window, and it is colorful and colorful. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
14. Press FN+PRTS/C again to enter "Fade up the horse":
The backlight of the keyboard is 7 color LEDs from left to right, after lighting one by one, trailing and fading, gradually disappearing. Line by line and then right to left, then alternately left and right, row by line. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.
15. Press FN+PRTS/C again to enter the "Starry Point":
The backlight of the keyboard is like a star in the night sky, with five colors and ten eyes. Support FN + "← / →" five-speed adjustment, support knob brightness adjustment.

LIGHT EFFECT MODE SWITCHING SEQUENCE:

- FN+ HM horse race, neon, static, breathing
- FN+ PGUP adjusts seven independent colors in the circle
- FN+ PGND adjusts the circumference of the five-cycle cycle
- FN+APP adjusts the circumference of the marquee to stop or turn on

摩豹官方微博



摩豹微信公众号

