


FN + F1 = 多媒体
FN + F2 = 音量 -
FN + F3 = 音量 +
FN + F4 = 静音
FN + F5 = 上一首
FN + F6 = 播放/暂停
FN + F7 = 下一首
FN + F8 = CD 停止
FN + F9 = 电子邮件
FN + F10 = IE
FN + F11 = 我的电脑
FN + F12 = 计算器

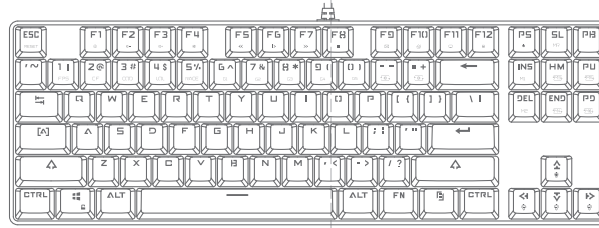

系统要求:

Windows XP/WIN7/WIN8/ WIN10/VISTA
IBM or compatible computer

中文
尺寸: 351X117X34MM
重量: 752g
寿命: 50,000,000 times (次)
电流: 500mA
类型: 高键帽阶梯设计
数量: 87 键, 采用双色键帽技术

Español
Tamaño: 351X117X34MM
Peso: 752g
Vida útil: 50.000.000 veces (veces)
Corriente: 500mA
Tipo: alto diseño de escalera keycap
Cantidad: 87 teclas, tecla de dos colores

Ελληνικά
Μέγεθος: 351X117X34MM
Βάρος: 752g
Διάρκεια ζωής: 50.000.000 φορές (φορές)
Τρέχουσα: 500mA
Τύπος: υψηλή κλίμακα σκάλα σχεδιασμού
Ποσότητα: 87 πλήκτρα, δύο κεραίες

Türk dili
Boyut: 351X117X34MM
Ağırlık: 752g
Ömür boyu: 50,000,000 kez (kez)
Akım: 500mA
Tipi: yüksek tuş şarj merdiveni tasarımı
Miktar: 87 tuş, iki renkli tuş takımı

Deutsch
Größe: 351X117X34MM
Gewicht: 752 g
Lebensdauer: 50.000.000 mal (mal)
Strom: 500mA
Typ: Leiterentwurf mit hoher Schlüsselkappe
Anzahl: 87 Tasten, zweifarbige Tastenkappe

System Requirements:

Windows XP/WIN7/WIN8/ WIN10/VISTA
IBM or compatible computer

English
Size: 351X117X34MM
Weight: 752g
Lifetime: 50,000,000 times (times)
Current: 500mA
Type: high keycap ladder design
Quantity: 87 keys, two-color keycap

Português
Tamanho: 351X117X34MM
Peso: 752g
Tempo de vida: 50.000.000 vezes (vezes)
Corrente: 500mA
Tipo: design de escada alta keycap
Quantidade: 87 teclas, keycap de duas cores

Polski
Rozmiar: 351X117X34 mm
Ciężar: 752g
Żywotność: 50 000 000 razy (razy)
Natężenie prądu: 500 mA
Typ: konstrukcja wysokiej drabinki na klawcze
Ilość: 87 klawcze, dwukolorowe nasadki

Українська
Розмір: 351X117X34MM
Вага: 752г
Термін служби: 50 000 000 разів (разів)
Струм: 500mA
Тип: високоякісний дизайн схожих ключів
Кількість: 87 ключі, двокольоровий кейскап

System Parameters 系统参数

功能说明:

1. 支持常用游戏模式按键背光及自定义录制按键背光功能。

标准版: FN+1至5键为固定游戏模式按键点亮。

2. 支持14种超炫LED灯光特效。

繁星点点, 随按随灭, 混光模式, 游戏高手, 川流不息, 随按随亮, 正弦光波, 常亮模式, 呼吸模式, 七彩霓虹, 一触即发, 雨滴滑落, 彩虹轮盘, 涟漪扩散。

3. 支持FN + "/" = "五级速度调节, 支持FN + "-" / "+" 个别模式下方向调节, 支持FN + "↑ / ↓" 亮度调节。

4. 支持全键无冲。

5. 支持锁WIN功能, 同时锁定WIN和锁APP键

6. 支持FN + ESC复位功能, 恢复到“繁星点点”默认灯光设置。

7. 支持FN + PS关/开背光功能。

键盘周围背光灯效调节:

FN+HOME 调节键盘周围流光, 跑马, 呼吸, 长亮, 霓虹, 关闭

FN+END 调节键盘周围个别模式七种独立颜色

FN+PGUP 键盘周围个别模式速度调节(4级)

FN+PGDN 键盘周围个别模式亮度调节(4级)

游戏高手模式及按键颜色固定设置:

FN+1=游戏模式1 (FPS第一人称射击游戏)-ASDW↑↓←→ESC亮

FN+2=戏模式2 (CF穿越火线) -ASDW 左Ctrl 左Shift 左Alt Space RGQEB 1-5 Tab

F1-F3 HM END PU PD PS 亮

FN+3=游戏模式3 (COD使命召唤) -QWERTASDFGCV 1-7 左Ctrl 左 Shift 亮

FN+4=游戏模式4 (LOL英雄联盟) -QWERASDF 1-7亮

FN+5=游戏模式5 (QQRace赛车) -WRASD 左Ctrl 左Alt 左Shift ↑↓←→亮

FUNCTION DESCRIPTION:

1. Support common game mode button backlight and custom recording button backlight function.

Standard Edition: The FN+1 to 5 button lights up for the fixed game mode button.

2. Support 14 kinds of super bright LED lighting effects.

Starry, with the press, the mixed mode, the game master, the stream is continuous, with the light, sinusoidal light, constant light mode, breathing mode, colorful neon, one touch, raindrops, rainbow roulette, diffusion.

3. Support FN + "/" = " five-speed adjustment, support FN + "-" / "+" in the individual mode direction adjustment, support FN + "↑ / ↓" five-level brightness adjustment.

4. Support full key without punch.

5. Support lock WIN function, while locking WIN and lock APP button

6. Support FN + ESC reset function, restore to the "Starry" default lighting settings.

7. Support FN+PS off/on backlight function.

WEEKLY BACKLIGHT ADJUSTMENT:

Adjust keyboard circumference streamer, horse racing, breathing, long light, neon, close

FN+END Adjusts Seven Independent Colors for Individual Mode of Keyboard Circle

FN+PGUP Keyboard Circle Individual Mode Speed Regulation (Level 4)

Individual mode brightness adjustment of FN+PGDN keyboard perimeter (level 4)

MASTER MODE AND BUTTON COLOR SETTINGS:

FN+1=Game Mode 1 (FPS First Person Shooting Game)-ASDW↑↓←→ESC Bright

FN+2=play mode 2 (CF cross firewire)-ASDW left Ctrl left Shift left Alt Space RGQEB 1-5 Tab

F1-F3 HM END PU PD PS bright

FN+3=Game Mode 3 (COD Call of Duty)-QWERTASDFGCV 1-7 Left Ctrl Left Shift Bright

FN+4=Game Mode 4 (LOL League of Legends)-QWERASDF 1-7 Bright

FN+5=Game Mode 5 (QQRace Racing)-WRASD Left Ctrl Left Alt Left Shift ↑↓←→Bright

灯光特效模式切换顺序：

插USB上电开机，展开跑马灯效动画，然后进入用户在最后一次使用的功能及灯光模式状态。

●按FN+INS进入“繁星点点”：

键盘的背光如夜空之点点繁星，五光十色，眨眼闪烁。

通过 FN+DEL闪烁速度和数量可按用户喜好调节。

支持 FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节

●按FN+INS进入“随按随灭”：

键盘整体背光常亮，亮度/颜色以之前调节的记忆参数为准。

通过 FN+DEL 切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

●按FN+INS进入“混光模式”：

键盘背光每排一种颜色，像彩带一般。

通过 FN+DEL 呼吸和常亮调节

支持 FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节

●按FN+INS进入“游戏高手”：

默认设定五组常用游戏按键灯光，按FN+1~5，可进行切换。也可以任意模式下，直接按FN+1~5进入相应背光状态。

FN+ 6-0 均可按FN+SCRLK可进行自定义录制，定义按键背光颜色。

先按FN+6-0其中任意一个按键后，再按FN+pause进入录制模式，可任意按下按键，七种颜色循环切换，直到自己喜欢的颜色，最后按下FN+SCRLK保存，录制成功。

清除自定义灯光，先按FN+6-0其中任意一个当前设定的灯光值后，再按FN+SCRLK，再次按下FN+SCRLK，清除成功。

●按FN+INS进入“川流不息”：

键盘的背光由右至左或由左至右流动，呈七彩颜色。

支持FN+“←/→”组合键，可调光波流动的左右方向。

支持FN+“-/”=“五级速度调节。

●按FN+INS进入“随按随亮”：

背光关闭，默认情况下，每次按键按下时随即亮起一种背光颜色，松开按键后按键的背光随之延时熄灭，7彩随机。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

●按FN+INS进入“正弦光波”：

键盘背景为LED关闭状态，一条七彩光波以正弦曲线形式上下波动翻飞，拖尾渐灭。速度越快，拖尾越长。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

●按FN+INS进入“常亮模式”：

键盘整体背光常亮，亮度以之前调节的记忆参数为准，七彩色可调。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“↑/↓”=“五级亮度调节。

●再次按下进入“呼吸模式”：

键盘整体背光模拟呼吸节奏，实现由灭至最高亮度的曲线变化。亮度、颜色及呼吸节奏速度，以之前调节的记忆参数为准。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节。

●再次按下进入“七彩霓虹”：

键盘整体背光亮度不变，灯光颜色呈七彩逐色交替变幻，亮度及变幻速度，以之前调节的记忆参数为准。

支持FN+“-/”=“五级速度调节。

●再次按下进入“一触即发”：

背光关闭，默认情况下，每次按键按下时，该行按键亮起一种背光颜色，向两侧以拖尾方式射出。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

●再次按下进入“雨滴滑落”：

键盘的背光状如雨滴贴窗滑落，七彩斑斓，时疾时徐。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

●再次按下进入“彩虹轮盘”：

键盘背光颜色状如七彩轮盘旋转，逐色交替变幻。

支持FN+“-/”=“五级速度调节。

支持FN+“←/→”=“可调光波流动的左右方向。

●再次按下进入“涟漪扩散”：

以按下的按键为中心，向四周波动扩散出一层五颜六色波浪，涟漪涌动，渐行渐远。

按FN+DEL组合键，切换随机七彩和7单色，共8种颜色可调。

支持FN+“-/”=“五级速度调节，FN+“↑/↓”五级亮度调节。

LIGHT EFFECT MODE SWITCHING SEQUENCE:

Plug in the USB power-on, expand the horse-riding effect animation, and then enter the user's last used function and light mode status.

● Press FN+INS to enter the "Starry Point":

The backlight of the keyboard is like a star in the night sky, with five colors and ten eyes.

The speed and number of flashing through FN+DEL can be adjusted according to user preferences.

Support FN+ " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment

● Press FN+INS to enter "Follow the button":

The overall backlight of the keyboard is always bright, and the brightness/color is based on the previously adjusted memory parameters.

Switch between random and 7-color with FN+DEL, a total of 8 colors can be adjusted.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

● Press FN+INS to enter the "mixed mode":

The keyboard backlight is one color per row, like a ribbon.

Adjusted by FN+DEL breath and constant light

Support FN+ " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment

● Press FN+INS to enter the "Game Master":

By default, five sets of commonly used game button lights are set, and FN+1~5 can be used to switch. Can also be pressed directly in any mode

FN+1~5 enters the corresponding backlight state.

FN+ 6-0 can be customized by FN+SCRLK to define the backlight color of the button.

Press any button of FN+6-0 first, then press FN+pause to enter the recording mode. You can press any button, and the seven colors will cycle until you like the color. Finally, press FN+SCRLK to save and record successfully.

To clear the custom light, first press any of the currently set light values of FN+6-0, then press FN+SCRLK and press FN+SCRLK again to clear the success.

● Press FN+INS to enter the "streaming flow":

The backlight of the keyboard flows from right to left or from left to right, in seven colors.

Support FN+ " ← / → " key combination to adjust the left and right direction of light flow.

Support FN + " - / =" five-level speed adjustment.

● Press FN+INS to enter "Follow the light":

The backlight is turned off. By default, a backlight color is illuminated each time the button is pressed. After the button is released, the backlight of the button is delayed and the color is random.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

● Press FN+INS to enter the "sinusoidal light wave":

The background of the keyboard is the LED off state, and a colorful light wave fluctuates up and down in a sinusoidal form, and the tail is gradually extinguished, speed

The faster, the longer the tail.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

● Press FN+INS to enter the "normal light mode":

The overall backlight of the keyboard is always bright, and the brightness is based on the previously adjusted memory parameters, and the seven colors are adjustable.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " ↑ / ↓ five levels of brightness adjustment.

● Press again to enter "Breath Mode":

The overall backlight of the keyboard simulates the breathing rhythm, achieving a curve change from extinction to maximum brightness. Brightness, color and breathing

The rhythm speed is based on the previously adjusted memory parameters.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment.

● Press again to enter the "Colorful Neon":

The overall backlight brightness of the keyboard is unchanged, and the color of the light changes alternately with color and color. The brightness and the speed of change are before

The adjusted memory parameters shall prevail.

Support FN + " - / =" five-level speed adjustment.

● Press again to enter "One Touch":

The backlight is off. By default, each time the button is pressed, the button lights up in a backlight color, trailing to the sides.

The way to shoot.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

● Press again to enter "Rain Drops":

The backlight of the keyboard is like a raindrop sticking down the window, and it is colorful and colorful.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

● Press again to enter "Rainbow Roulette":

The color of the keyboard backlight is like a colorful roulette wheel, and the color changes alternately.

Support FN + " - / =" five-speed adjustment.

Supports FN+ " ← / → " to adjust the left and right direction of light flow.

● Press again to enter "diffusion":

Centering on the pressed button, a wave of colorful waves spreads around the waves, rushing and drifting away.

Press the FN+DEL key combination to switch between random and 7-color, and a total of 8 colors are adjustable.

Support FN + " - / =" five-level speed adjustment, FN + " ↑ / ↓ five-level brightness adjustment.

运营商：香港飞翔科技集团有限公司

制造商：深圳市宝安区智源电子厂 地址：深圳市宝安区5区前进路

Operator: Motospeed Technology Group Limited

Manufacturer: Mototech Technology Group Limited

Address: Qianjin Road, 5th District, Bao'an Shenzhen P.R. China

HOTLINE: 4008-860-368

以上数据仅供参考，实物与图片可能不相符！

最终解释权归本公司所有

WWW.MOTOSPEED.CN

WWW.MOTOSPEED.CC

摩豹官方微博



摩豹微信公众号

