

背光光效模式 Backlight mode

尺寸Size: 329.5*115.6*40mm
 线材长度Wire length: 1.5M
 重量Weight: 980g
 按键数Number keys: 67key
 轴体类型: 热插拔机械轴
 轴体类型: 热插拔机械轴
 背光Backlight: RGB
 侧灯Side lights: RGB
 电压Voltage: 4.4~5.25V
 电流Electric current: 5V/200mA
 接口Interface: Type-C
 兼容系统Compatible system: Windows XP/VISTA/7/8/10

05

尾页

刀模线

首页

折线

背光光效模式 Backlight mode

切换按键背光单色模式
Switch key backlight monochrome mode

同时按住FN及对应按键组合实现相应图示键位功能
At the same time, press and hold FN and the corresponding key combination to achieve the corresponding graphic key function.

01

FN+DEL --背光录制模式 Backlight recording mode

You can edit the backlight pattern. The specific operation steps are as follows:

- After pressing any key, start to select the required key light color, press red, green, blue, yellow, purple, green, pink, white in turn, select the light color and the required color, long press FN + Del to save as recording light effect.
- FN + Tab --- press and hold for 2 seconds, the backlight will flash and return to the default state, clear the recorded pattern and return to the default state.
- FN + TAB --- 长按2秒, 背光闪烁, 恢复到默认状态, 清除已录制图案回默认

02

特殊按键功能一览表 List of special key functions

FN+1=F1 FN+2=F2 FN+3=F3 FN+4=F4 FN+5=F5 FN+6=F6 FN+7=F7 FN+8=F8
 FN+9=F9 FN+0=F10 FN+=F11 FN++=F12

- FN+WIN 锁 WIN 键
FN+WIN Lock with key
- FN+DEL 短按切换背光灯效
FN+DEL Short press to switch backlight effect
- FN+↑ 亮度增加
FN+↑ Brightness plus
- FN+→ 速度增加
FN+→ Speed up
- FN+TAB 恢复出厂设置
FN+TAB restore factory settings
- FN+PGUP 切换侧灯灯效
FN+PGUP switch side lamp effect
- FN+↓ 亮度减少
FN+↓ Brightness reduction
- FN+← 速度减少
FN+← deceleration
- FN+DEL 长按5秒 背光图案录制
FN+ Del long press 5 seconds backlight pattern recording
- FN+PGDN 全开/全关灯光
FN+ PGdn full on / full off light

03

旋钮功能定义 Knob function definition

- 顺时针旋转=音量增加
Clockwise rotation = volume increase
- 逆时针旋转=音量减小
Counter clockwise = volume down
- 按压旋钮开关=播放/暂停
Press the knob switch = play / pause

04

说明:

- 1.完全尺寸: 284*80 (mm), 成品尺寸: 142*80 (mm);
- 2.送货须按成品尺寸送货。按图档顺序排列;
- 3.材质:80g书写纸。